

FUSEBOX 1

- LOW BEAM
15 AMP
- HI BEAM
25 AMP
- RAD FAN
25 AMP
- BRAKE
10 AMP
- HEAD
25 AMP
- HAZARD
10 AMP

FUSEBOX 4

- MAIN
40 AMP
- HORN
10 AMP
- SEAT BELT
7.5 AMP
- HANDBRAKE
7.5 AMP
- ALTERNATOR
10 AMP
- WATER PUMP
10 AMP

FUSEBOX 2


- PARK
10 AMP
- E.C.U
15 AMP
- RESERVOIR
10 AMP
- REVERSE
10 AMP
- FUEL PUMP
15 AMP
- REAR FOG
15 AMP

FUSEBOX 3

- INDICATOR
10 AMP
- WASHER
25 AMP
- WSCREEN
15 AMP
- HEATER
15 AMP
- GAUGES
10 AMP
- WIPER
15 AMP

OPTIONAL

Circuit tester switch

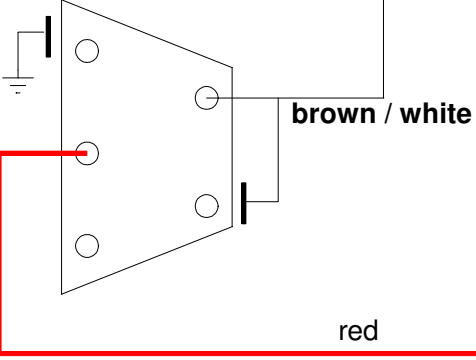

**black / red
ignition relay pin # 87**